

How to Safely Remove Nesting Tables from the Crate

Tools Needed:

- Flat blade screwdriver or small prybar
- Scissors or other cutting implement to cut the banding

2 People Needed

Directions:

1. Locate the side of the crate that says, "Open This Side"
2. Find the slot on the clip
3. Hold your free hand over the clip so that the clip doesn't fly off when removing
4. Using the screwdriver, insert the head of the screwdriver into the slot on the clip (found on the side of the clip with lettering)
5. Pry clip off the crate
6. After removing the first clip, it can then be used to remove the remaining clips by placing the end of the clip that does not have writing on it into the slot and prying
7. After all the clips are removed, 2 people must lift the crate wall out and away from the crate, and then place it on the ground and out of the way
8. Starting on the largest table, cut the banding
9. Slide the largest table 8" to 10" off the crate
10. Remove casters from the box
11. Feel under the nesting table for the caster socket and insert both casters
12. Continue to slide out the nesting table until 2" is resting on the crate
13. Lock the front casters and have 1 person hold the table to prevent it from falling off the crate while a second person inserts the casters
14. Slide the table the rest of the way out of the crate
15. Repeat steps 7-13 until all the tables are removed